

K800

Setup Guide | 设置指南 | 設定指南 | 설치 가이드

 


logitech®

English	3
简体中文	9
繁體中文	15
한국어	21

www.logitech.com/support/k800

WHAT'S IN THE BOX

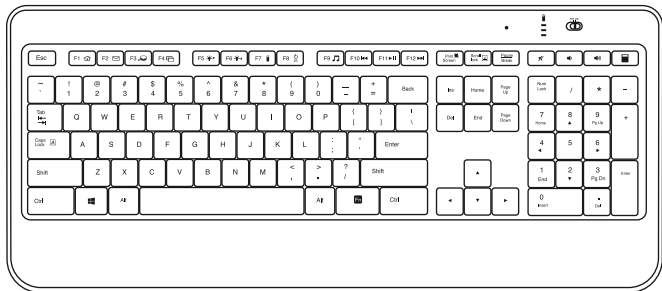


 unifying™




SET UP

 1



2

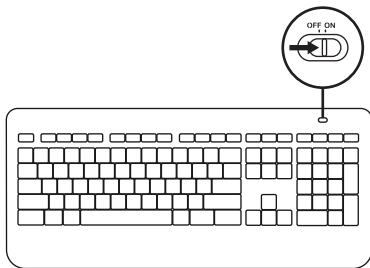 

3

 


Software installation
[logitech.com/options](https://www.logitech.com/options)

4

English

KEYBOARD FEATURES

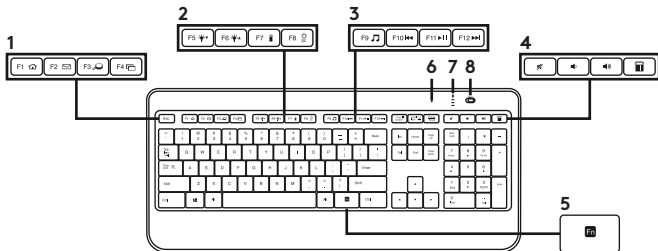

1. Application zone

- Fn** + F1 Launch Internet browser
- Fn** + F2 Launch e-mail application
- Fn** + F3 Launch Search
- Fn** + F4 Flip

2. Convenience zone

- Fn** + F5 Backlight down by 25%
- Fn** + F6 Backlight up by 25%
- Fn** + F7 Battery check
- Fn** + F8 Sleep mode

3. Multimedia navigation zone

- Fn** + F9 Launch media
- Fn** + F10 Previous track
- Fn** + F11 Play/Pause
- Fn** + F12 Next track

4. Multimedia volume zone

- Mute
- Volume down
- Volume up
- Calculator

5. **Fn** key

6. Automatic light sensor (ALS)

7. Battery status indicator

8. Keyboard power switch.

 
RECHARGING

Recharging the keyboard

Typically, you can expect about 10 days of battery life before you will need to recharge the keyboard battery.* If the backlighting level is set to 100%, you have about 15 hours of battery life.

To recharge the keyboard, connect it to your computer using the USB recharging cable. A full battery recharge takes about 5 hours and only 3 hours if the keyboard has been switched off.

Battery life varies with usage, backlighting level, and computing conditions. Heavy usage usually results in shorter battery life.

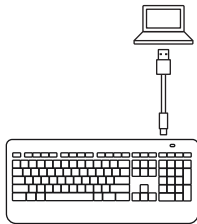


UNIFYING

Logitech® Unifying technology connects up to six compatible Logitech mice and keyboards to the same receiver, using only one USB port for multiple devices.

To learn more, visit:

 
www.logitech.com/support/unifying

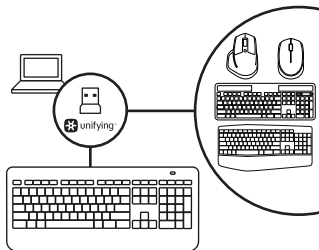


TROUBLESHOOTING

Keyboard not working?


 
1. Slide the keyboard's Off/On switch to Off and then On. The keyboard's battery status indicator LEDs should light up.
2. Confirm that the keyboard is charged. The battery status indicator is red when the battery is low.
3. Try plugging the Unifying receiver into another USB port.
4. Move the Unifying receiver closer to the keyboard.
5. Try reconnecting the keyboard and Unifying receiver using the Logitech Unifying software (see the Unifying section).
6. Restart the computer.




BATTERY REMOVAL INFORMATION

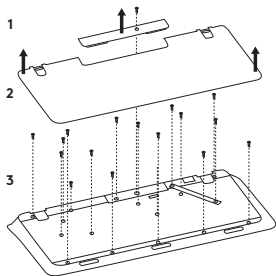 

  1. Remove 1 screw and battery door.
2. Remove bottom panel.
3. Remove 17 screws.
4. Remove top case.
5. Remove 6 screws.
6. Remove keyframe, light guide panel and metal plate.
7. Remove tape, then disconnect the battery cables from the main circuit board, remove battery from the bottom case.
8. Dispose of the battery and product according to local laws.

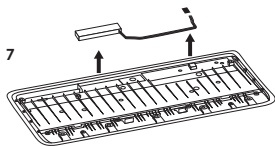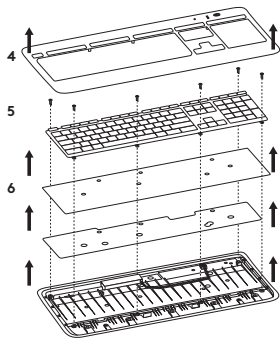

包装内容

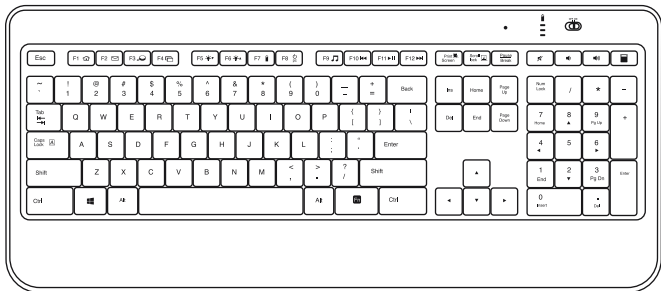 


设置

1



 2

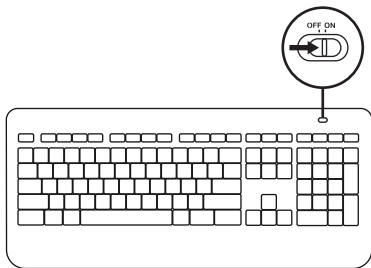


3



软件安装

logitech.com/options

 键盘功能

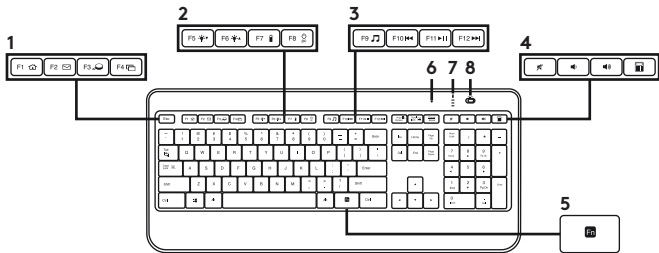

1. 应用程序区

- Fn** + F1 启动 Internet 浏览器
- Fn** + F2 启动电子邮件应用程序
- Fn** + F3 启动搜索
- Fn** + F4 翻转

2. 快捷区

- Fn** + F5 背光调暗 25%
- Fn** + F6 背光调亮 25%
- Fn** + F7 电池电量检查
- Fn** + F8 休眠模式

3. 多媒体导航区

- Fn** + F9 播放媒体
- Fn** + F10 上一曲目
- Fn** + F11 播放/暂停
- Fn** + F12 下一曲目

4. 多媒体 音量区

- 静音
- 调低音量
- 调高音量
- 计算器

5. **Fn** 键

6. 自动光线传感器 (ALS)

7. 电池电量指示灯

8. 键盘电源开关

 
充电

为键盘充电

通常情况下，电池电量可支持使用大约 10 天，之后需要为键盘电池充电。*
如果背光亮度等级设置为 100%，电池电量可支持使用大约 15 小时。

要为键盘充电，请用 USB 充电线将其连接到计算机。充满电大约需要 5 小时，如果键盘已关闭，则只需 3 小时即可充满。

电池寿命随使用情况、背光亮度等级和计算条件不同而异。长时间使用将缩短电池寿命。

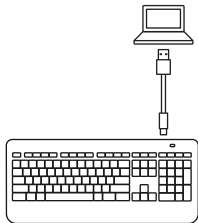


UNIFYING™ 优联

罗技® Unifying™ 优联技术可将多达六个兼容的罗技鼠标和键盘连接至相同接收器，只需一个 USB 端口就可连接多个设备。

如欲了解更多信息，请访问：

 www.logitech.com/support/unifying

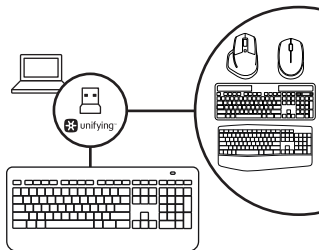


疑难解答

键盘不工作？



1. 将键盘的开关按钮滑动到 Off 位置，然后再滑动到 On 位置。
键盘电池电量 LED 指示灯应点亮。
2. 确认键盘已充满电。电池电量低时，电池电量指示灯为红色。
3. 尝试将 Unifying™ 优联接收器插入其它 USB 端口。
4. 移动 Unifying™ 优联接收器，使其更靠近键盘。
5. 尝试使用罗技 Unifying™ 优联软件重新连接键盘和 Unifying™ 优联接收器（请参考 Unifying™ 优联部分）。
6. 重新启动计算机。



 
电池移除信息

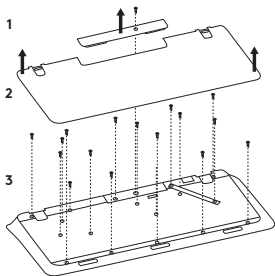

  1. 卸下 1 螺丝与电池盖。
2. 取下下面板。
3. 卸下 17 螺丝。
4. 卸下顶盖。
5. 卸下 6 螺丝。
6. 卸下键架、导光板和金属板。
7. 取出胶带, 然后将电池连接线与主电路板断开, 将电池从下底盖中取出。
8. 根据当地法律对电池和产品进行弃置。

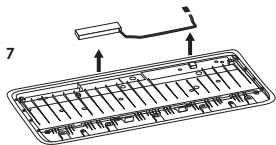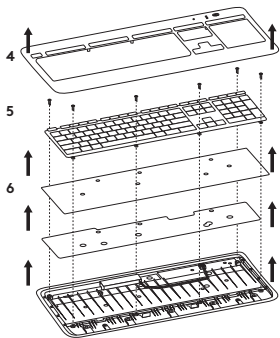

包裝內容

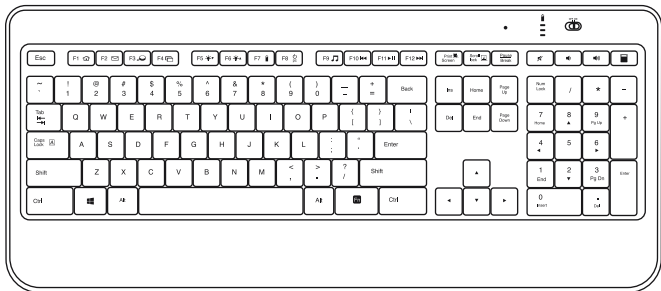 


設定

1



 2

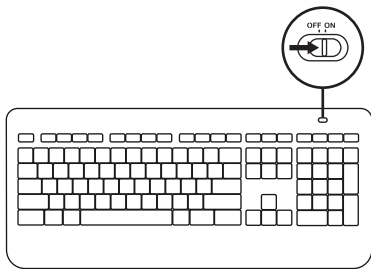


3



軟體安裝

logitech.com/options

 鍵盤功能

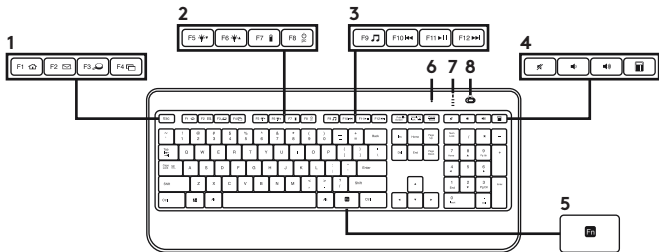

1. 應用程式區域

- Fn** + F1 啟動 Internet 瀏覽器
- Fn** + F2 啟動電子郵件應用程式
- Fn** + F3 啟動搜尋功能
- Fn** + F4 翻轉

2. 便利區域

- Fn** + F5 背光減弱 25%
- Fn** + F6 背光增強 25%
- Fn** + F7 電池檢查
- Fn** + F8 休眠模式

3. 多媒體瀏覽區域

- Fn** + F9 啟動媒體
- Fn** + F10 上一曲目
- Fn** + F11 播放/暫停
- Fn** + F12 下一曲目

4. 多媒體 音量區域

- 靜音
- 調低音量
- 調高音量
- 小算盤

5. **Fn** 按鍵

6. 自動光線感應器 (ALS)

7. 電池狀態指示燈

8. 鍵盤電源開關。

 
充電

為鍵盤充電

一般來說，您可以使用大約 10 天，才需要為鍵盤電池充電。^{*} 如果背光亮度設定 100%，則大約可以使用 15 小時。

若要為鍵盤充電，請使用 USB 充電連接線將其連接到電腦。電池完全充電約需 5 小時，如果充電時關閉鍵盤電源，則只需 3 小時。

^{*} 電池使用時間視使用情況、背光亮度和運算環境而異。頻繁使用通常會讓使用時間減少。

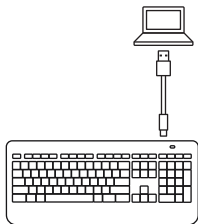


UNIFYING

羅技® Unifying 技術最多可將六個相容的羅技滑鼠和鍵盤連線到相同的接收器上，多個裝置僅需使用一個 USB 連接埠。

若要瞭解詳細資訊，請造訪：

 
www.logitech.com/support/unifying

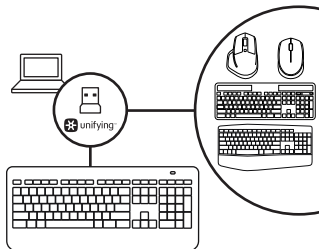


疑難排解

鍵盤無法運作？


 
1. 將鍵盤的關閉/開啓開關撥到關閉位置，然後再撥回開啓位置。鍵盤的電池狀態指示燈應亮起。
2. 確認鍵盤充滿電力 電力不足時，電池狀態指示燈會亮起紅燈。
3. 嘗試將 Unifying 接收器插入到其他 USB 連接埠。
4. 將 Unifying 接收器移動到更接近鍵盤的位置。
5. 使用羅技 Unifying 軟體，嘗試重新連線鍵盤與 Unifying 接收器 (請參閱 Unifying 部分)。
6. 重新啓動電腦。




電池移除資訊

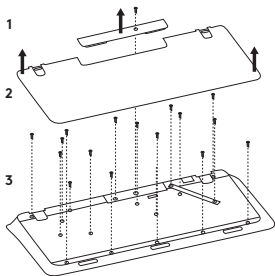 

  1. 取下 1 個螺絲與電池外蓋。
2. 卸下底板。
3. 取下 17 個螺絲。
4. 取下上層外殼。
5. 取下 6 個螺絲。
6. 取下鍵架、導光板和金屬板。
7. 取下膠帶，然後將電池連接線從主電路板上拔下，從下層外殼中取出電池。
8. 根據當地法律棄置電池與產品。

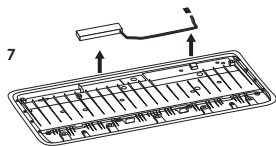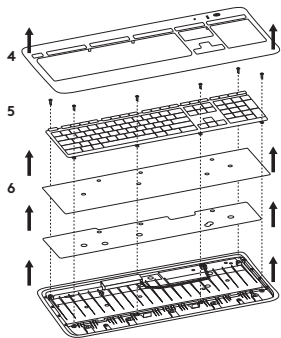

박스 내용물

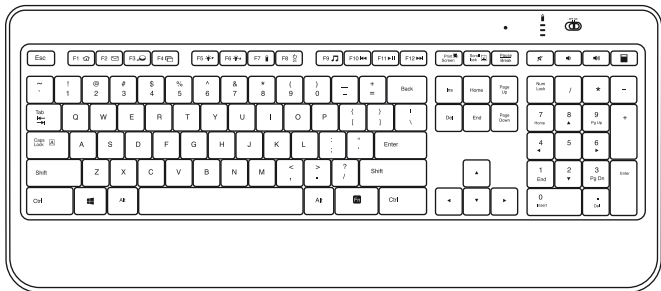 


 unifying™




설치

 1



2

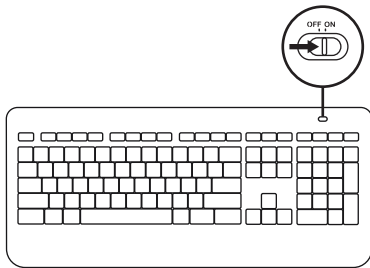 


3



소프트웨어 설치
logitech.com/options

 키보드 기능

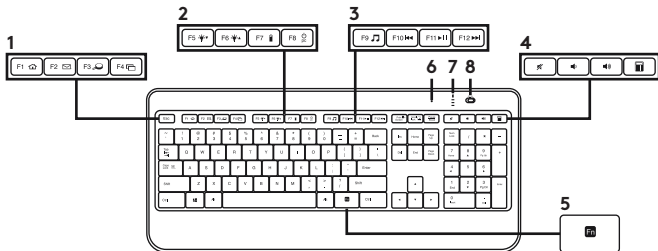

1. 응용 프로그램 실행

- Fn** + F1 인터넷 브라우저 실행
- Fn** + F2 이메일 프로그램 실행
- Fn** + F3 검색 실행
- Fn** + F4 전환

2. 편의 기능

- Fn** + F5 백라이트 25% 어둡게
- Fn** + F6 백라이트 25% 밝게
- Fn** + F7 배터리 확인
- Fn** + F8 슬립 모드

3. 멀티미디어 컨트롤

- Fn** + F9 미디어 실행
- Fn** + F10 이전 트랙
- Fn** + F11 재생/일시 중지
- Fn** + F12 다음 트랙

4. 멀티미디어 볼륨 조절

- 음소거
- 볼륨 줄이기
- 볼륨 높이기
- 계산기

5. **Fn** 키

6. 자동 조명 센서(ALS)

7. 배터리 상태 표시기

8. 키보드 전원 스위치.

 
충전

키보드 충전

일반적으로 키보드 배터리를 충전하기까지 약 10일 정도 배터리 수명이 지속됩니다.* 백라이트 레벨이 100%로 설정된 경우, 배터리 수명은 약 15시간입니다.

키보드를 충전하려면 USB 충전 케이블을 사용하여 키보드를 컴퓨터에 연결하십시오. 배터리를 완전히 충전하는 데에는 약 5시간이 걸리며, 키보드 전원을 끄면 3시간 만에 완전 충전됩니다.

* 배터리 수명은 사용량, 백라이트 밝기 수준 및 컴퓨터 작업 환경에 따라 다릅니다. 사용량이 많으면 배터리 수명이 짧아집니다.

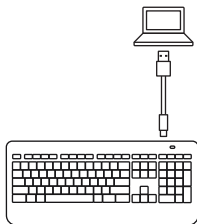


UNIFYING

로지텍 Unifying 기술로 최대 6개의 로지텍 마우스 및 키보드를 하나의 USB 리시버에 연결할 수 있습니다.

자세한 내용은 아래의 웹페이지를 참조하십시오:

 
www.logitech.com/support/unifying

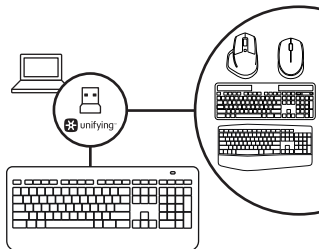


문제 해결

키보드가 작동하지 않습니까?


 
1. 키보드의 전원 스위치가 켜졌는지 확인하십시오. 키보드의 배터리 상태 표시등 LED가 점등되어야 합니다.
2. 키보드가 충전되는지 확인하십시오. 배터리가 부족하면 배터리 상태 표시등이 빨간색입니다.
3. Unifying 수신기를 다른 USB 포트에 꽂아 봅니다.
4. Unifying 수신기를 키보드에 더 가까이 옮기십시오.
5. 로지텍 Unifying 소프트웨어를 사용해 키보드와 Unifying 수신기를 다시 연결해 보십시오(Unifying 설명 참조).
6. 컴퓨터를 다시 시작해보십시오.



배터리 제거 정보

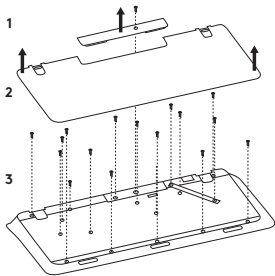 

  1. 나사 1개와 배터리 도어를 제거합니다.
2. 하단 패널을 제거합니다.
3. 나사 17개를 제거합니다.
4. 상단 케이스를 제거합니다.
5. 나사 6개를 제거합니다.
6. 키프레임, 조명 가이드 패널 및 금속 플레이트를 제거합니다.
7. 테이프를 제거한 다음 메인 회로 보드에서 배터리 케이블을 분리하여 하단 케이스에서 배터리를 제거합니다.

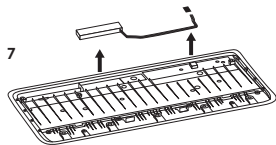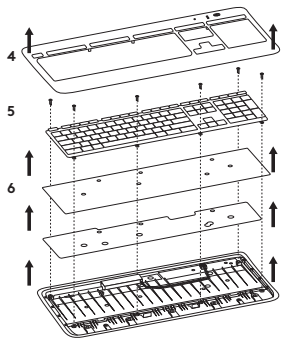

8. 해당 지역의 법규에 따라 배터리 및 제품을 폐기합니다.



© 2020 Logitech. Logitech, Logi, 罗技 and the Logitech Logo are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2020 罗技。罗技、Logi、Logitech 和罗技标志为罗技欧洲公司和/或其美国及其他国家/地区附属公司的商标、并或已注册。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

WEB-621-001837.002