

 
 
 
G535

Wireless Gaming Headset
无线游戏耳机麦克风

SETUP GUIDE | 设置指南




logitech 

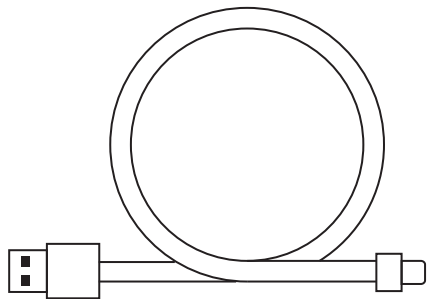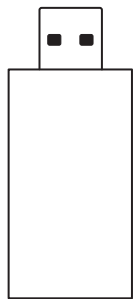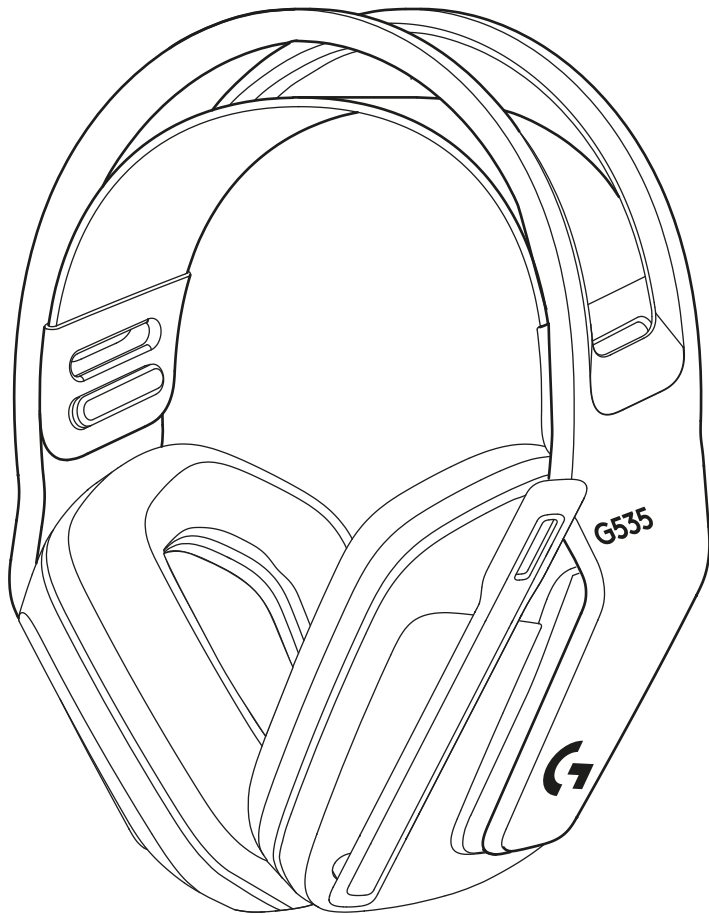

ENGLISH	3
简体中文	7
繁體中文	11
한국어	15

SETUP INSTRUCTIONS

 
- Insert receiver into the USB port of your PC.

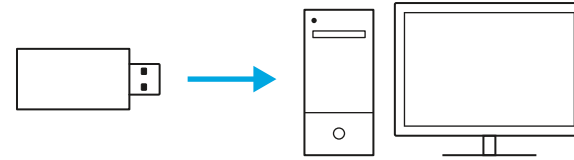

- Short press to turn ON.




 - (Optional) Download Logitech G HUB software to access advanced features. Download at logitechG.com/ghub

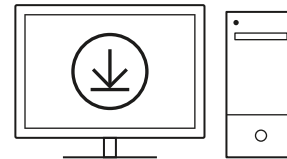


logitechG.com/ghub

 
- The earcups can be adjusted up and down.

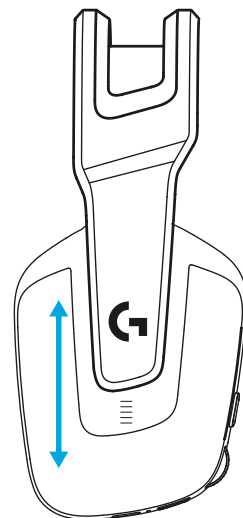

 
- The length of the headband can be adjusted.

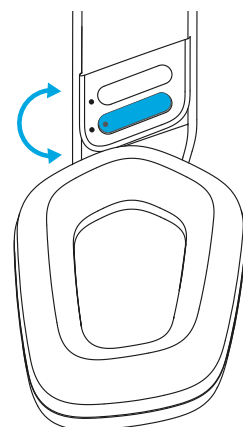

- Flip boom up to mute.

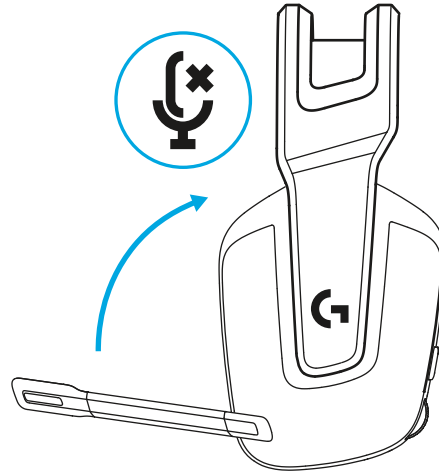 


- Charge Headset when low on battery.

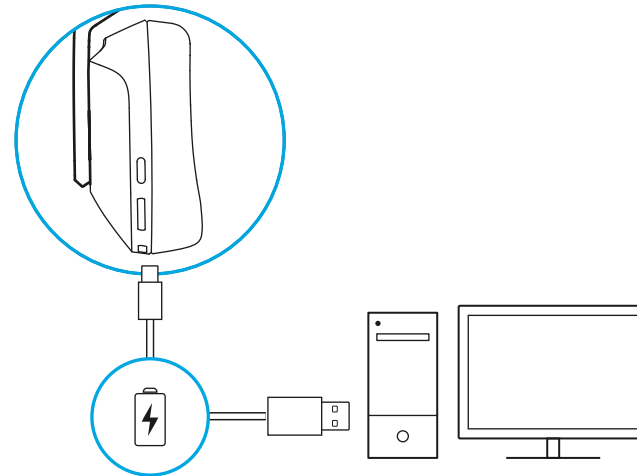 

FEATURES

 - 1 Adjustable, reversible suspension band
- 2 Memory foam earpads
- 3 40 mm drivers
- 4 On-ear volume control
- 5 Flip-to-mute 6-mm mic
- 6 USB-C charging port

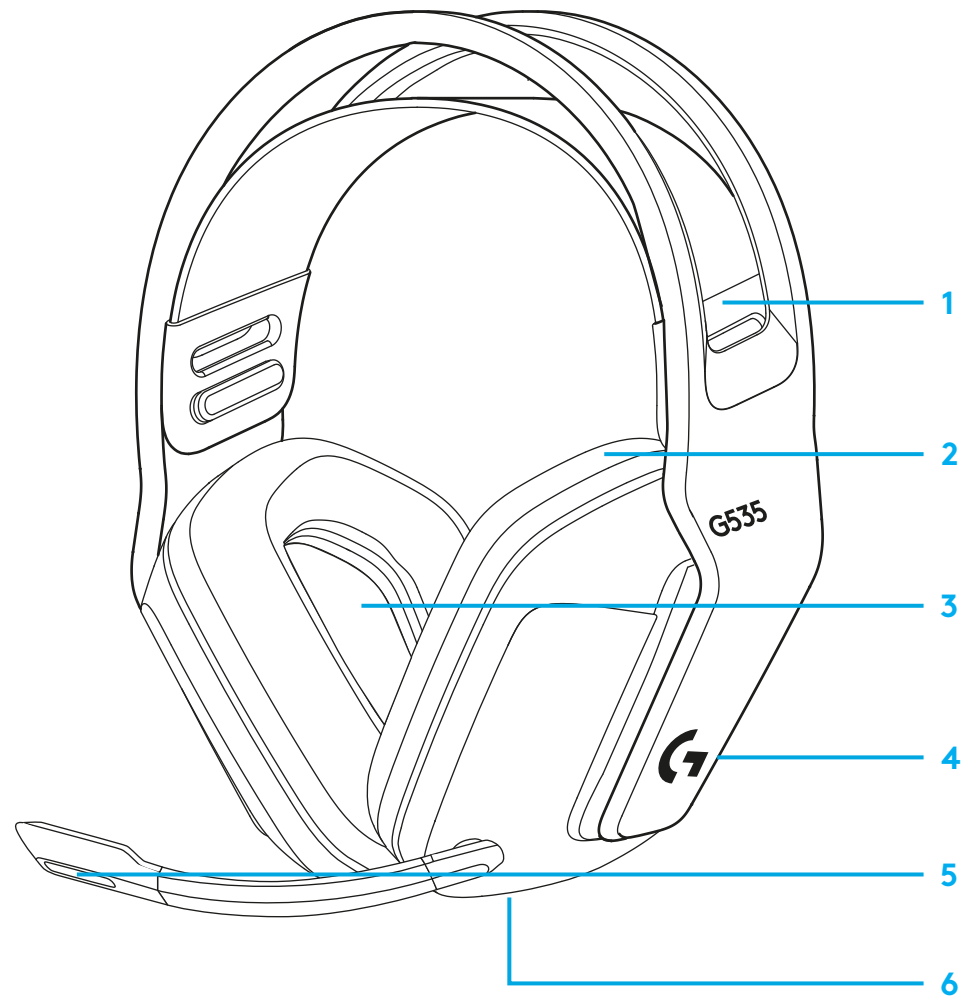


FREQUENTLY ASKED QUESTIONS

www.logitechG.com/support/G535

设置说明

 
- 将接收器插入 PC 的 USB 端口。

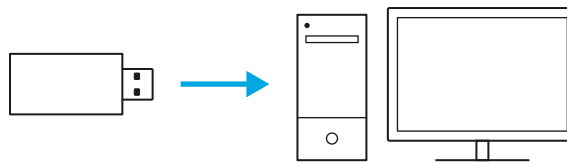

- 短按启动。




 - (可选) 下载罗技 G HUB 软件以使用高级功能。下载请访问 logitechG.com/g Hub。

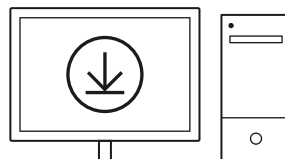


logitechG.com/g Hub

 
- 耳罩可以上下调节。

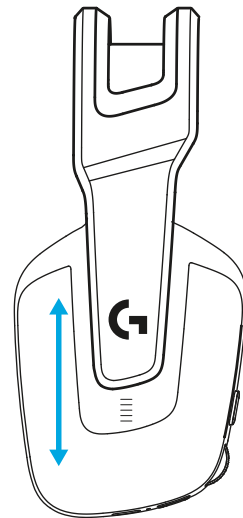


- 头带的长度可以调节。

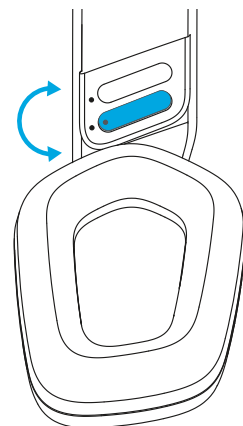 

- 折叠麦克风杆以静音

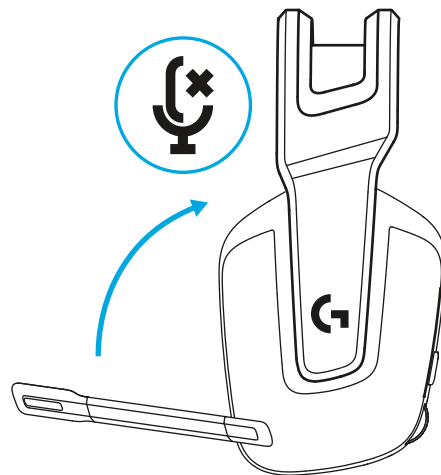 


- 电量低时请为耳机麦克风充电

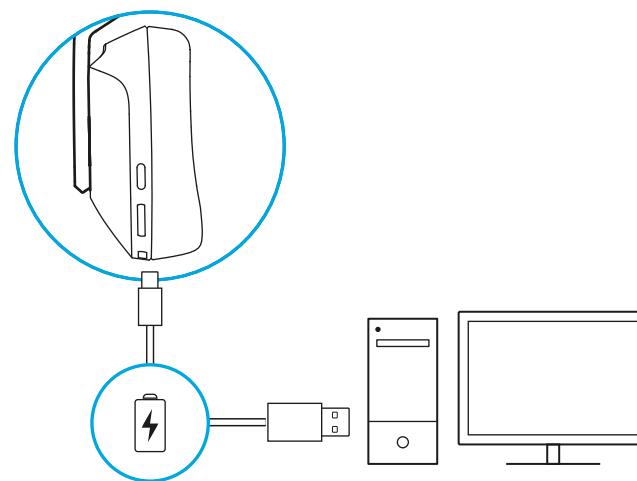 

特性

 - 1 可调节的双面悬挂式头带
- 2 记忆泡棉耳垫
- 3 40 毫米音频驱动单元
- 4 机身音量控制
- 5 6 毫米折叠静音麦克风
- 6 USB-C 充电端口

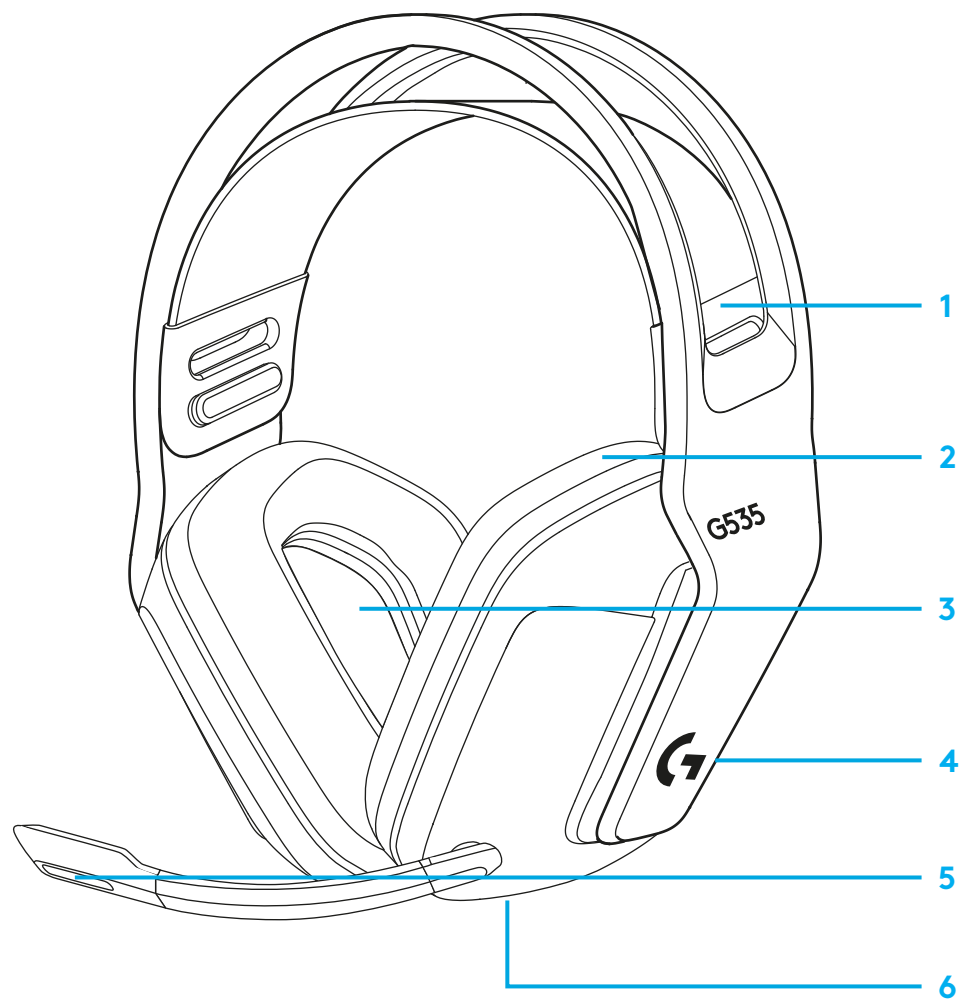


常见问题解答

www.logitechG.com/support/G535

設定說明

 
- 將接收器插入到您 PC 的 USB 連接埠。

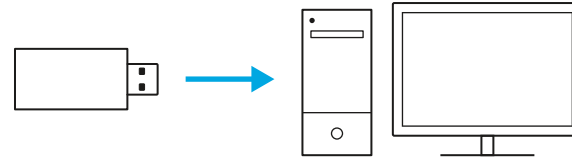

- 短按開啓按鈕開啓電源。




 - (選用) 下載羅技 G HUB 軟體可使用進階功能。此軟體可從 logitechG.com/ghub 下載

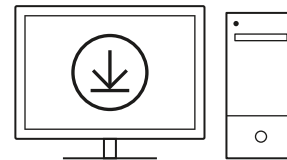


logitechG.com/ghub

 
- 耳罩可上下調整位置。

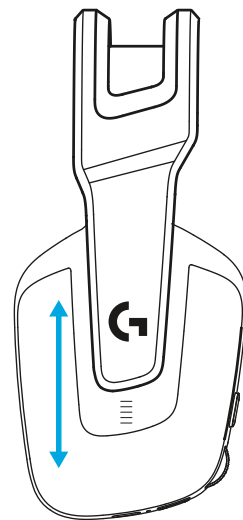


- 頭帶可以調整長度。

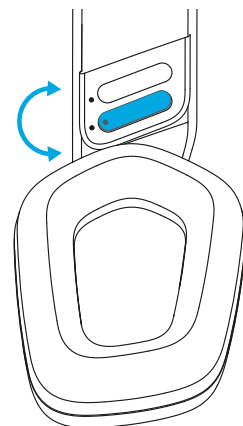 

- 將麥克風桿往上翻折可靜音

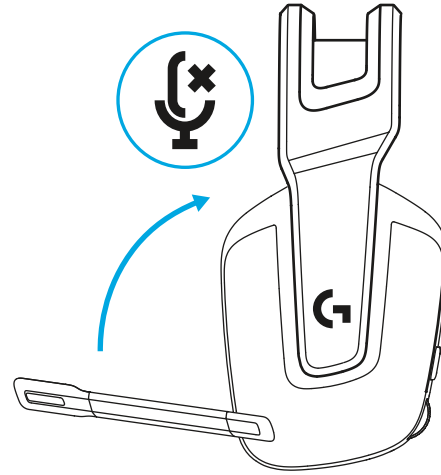 


- 耳機麥克風電量偏低時請為其充電

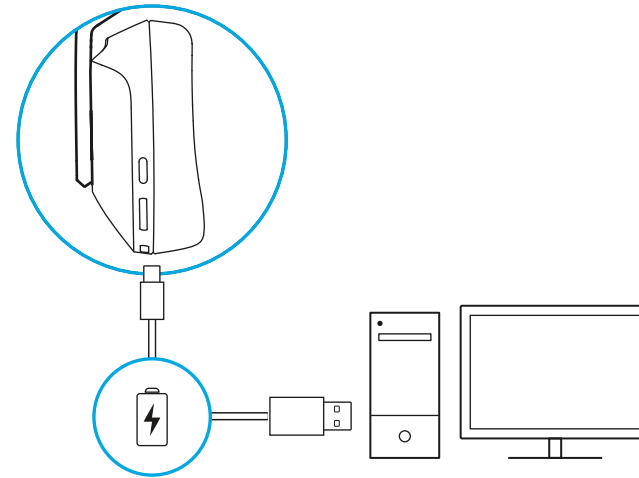 

功能

 - 1 可調整、可反折懸吊頭帶
- 2 記憶泡綿耳墊
- 3 40 公釐單體
- 4 耳罩音量控制：
- 5 6 公釐翻轉靜音麥克風
- 6 USB-C 充電連接埠

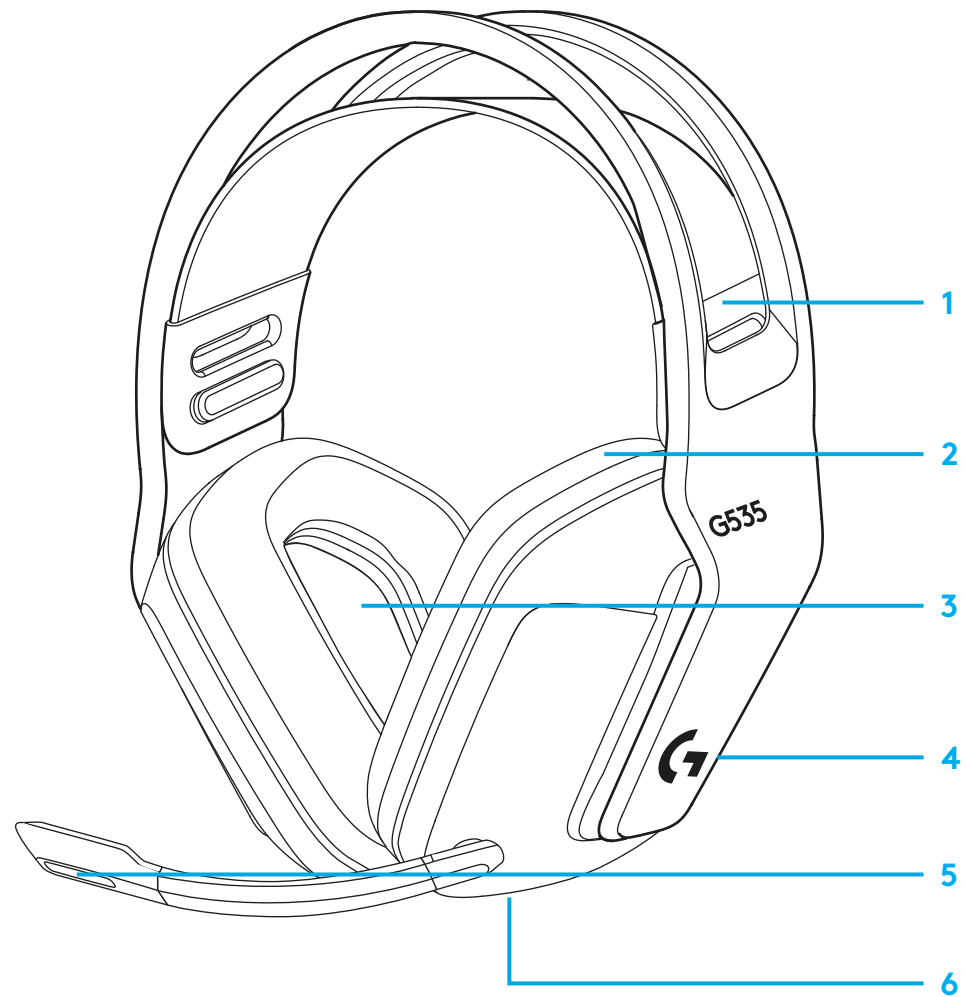


常見問答集

www.logitechG.com/support/G535

설치 지침

 
- PC의 USB 포트에 수신기를 삽입합니다.

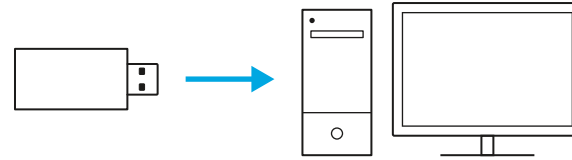

- 짧게 누르면 켜집니다.




 - 로지텍 **G HUB** 소프트웨어를 다운로드하여 고급 기능을 이용할 수 있습니다(선택 사항). logitechG.com/ghub에서 다운로드하세요.

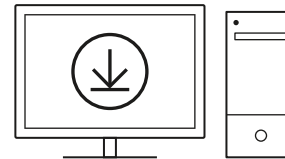


logitechG.com/ghub

 
- 이어컵을 위아래로 조절할 수 있습니다.

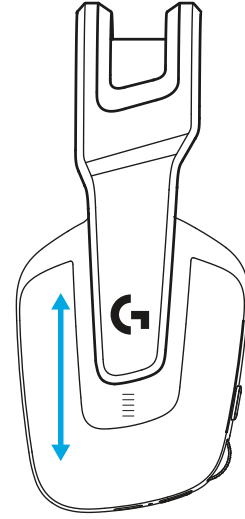


- 헤드밴드의 길이를 조절할 수 있습니다.

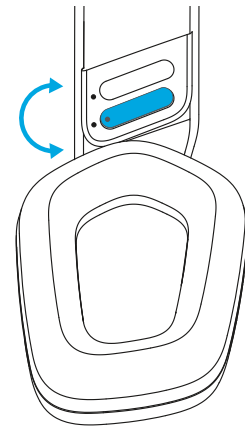 

- 마이크를 위로 올려 음소거.

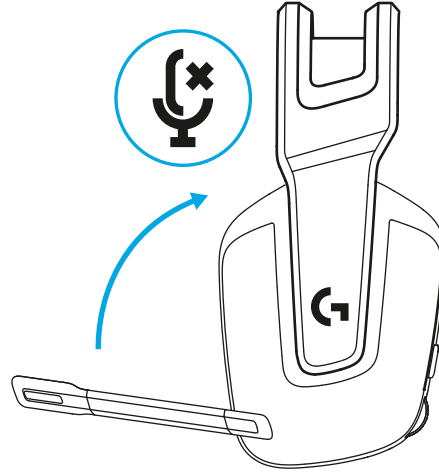 


- 배터리가 낮을 때 헤드셋 충전.

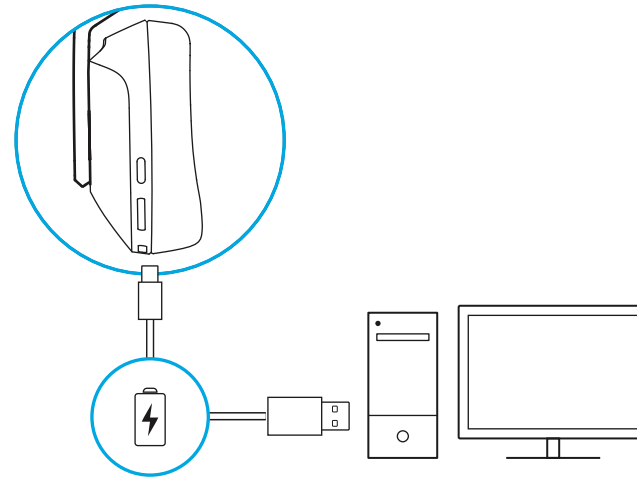 

기능

 - 1 조절식 리버서블 서스펜션 밴드
- 2 메모리폼 이어패드
- 3 40mm 드라이버
- 4 온이어 볼륨 컨트롤
- 5 6mm 플립 음소거 마이크
- 6 USB-C 충전 포트

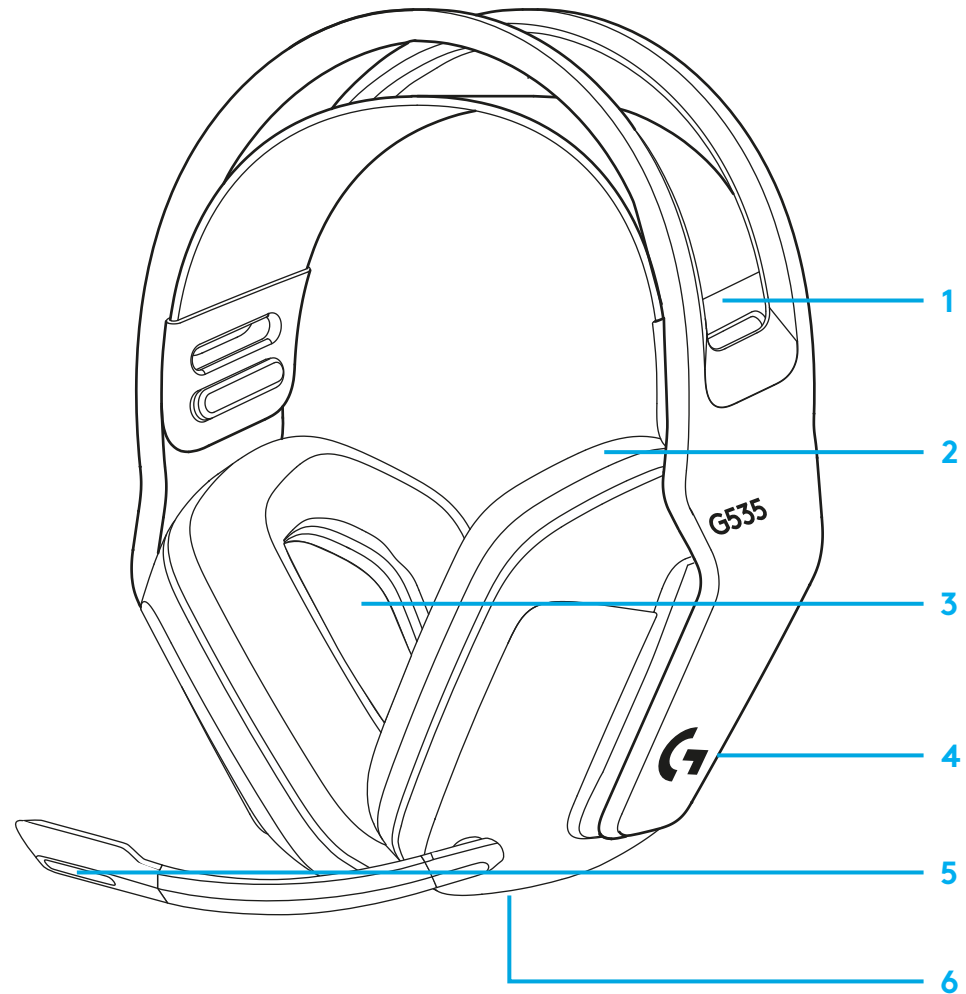

자주 묻는 질문(FAQ)

www.logitechG.com/support/G535



©2022 Logitech. Logitech, Logitech G, Logi and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2021 罗技。罗技、罗技 G、Logitech、Logitech G 及其各自标志为罗技欧洲公司和/或其在美国及其他国家/地区附属公司的商标，并或已注册。所有其它商标均是其各自所有者的财产。对于本手册中可能出现的任何错误，罗技不承担任何责任。本资料包含的信息如有更改，恕不另行通知。

WEB-621-002135 002